


Media Care & Maintenance

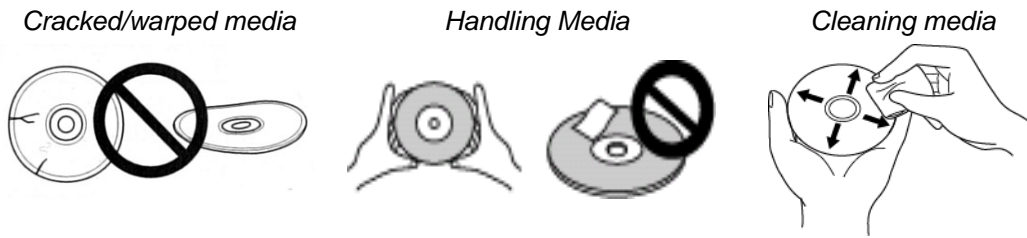

Cracked or warped discs may damage a media playing/recording device. If a disc breaks inside of the unit, pieces are likely to strike the optics. If this happens, contact an authorized Pioneer service facility.

When working with DVD or CD recordable media, follow the guidelines below:

- Avoid touching or scratching the signal side (shinier side) of the disc.
- Hold the disc by the edges or by the center hole.
- Do not affix paper labels to the media.
- Avoid using non-standard disc shapes such as hearts, polygons, etc.
- Remove dust or lint from the disc with a soft dry cloth by wiping from the inside to the outside edge rather than in a circular motion.
- Do not apply record cleaning fluids, anti-static solutions or chemicals to clean a disc.
- Store discs vertically and in a dust-free case whenever possible.